


OFFSET PROOFING PRESS


This economical, but quality, offset ink proofer is used by printers and ink manufacturers for quality control purposes. Use this product to help reduce waste and increase quality and profits.

These Little Joe compact proofing presses were developed to help offset printers match customer color samples as well to assist ink and pigment manufacturers with their process control. Two manually operated models (H and HD) are available.

The one-color **Model H** is a small, compact, proofing press especially designed for color matching in printing ink plants and offset pressrooms, affording quick wash-up and change-over from color to color.

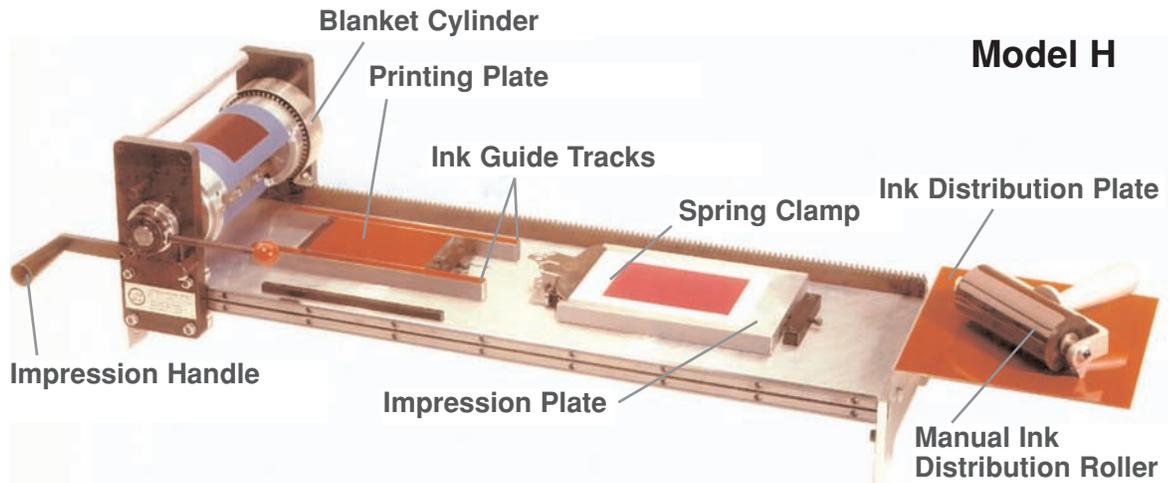

The two-color **Model HD** speeds up color matching and checking for printability, tack and picking. It also permits making two-color prints to check trapping.

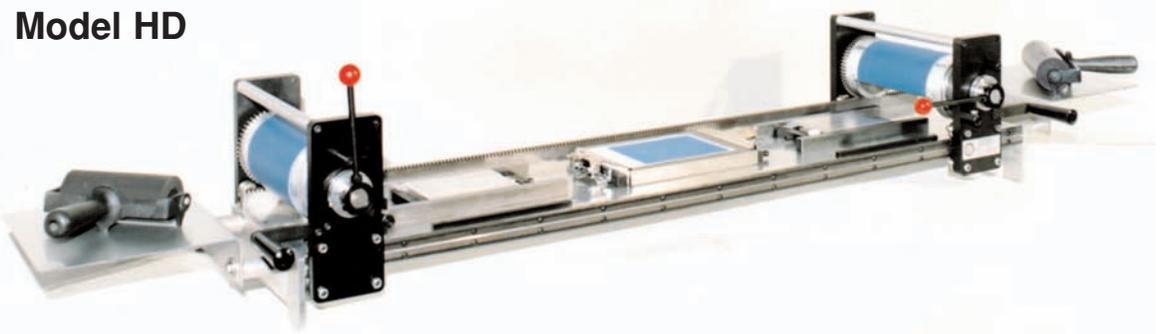

Specifications

Model H (one-color)

Maximum plate size 5x6.5"/13x17cm
Maximum sheet size 9x12"/23x30cm
Blanket size 7x13.375x.065"/18x34x1.72cm
Physical characteristics:
Height 11"/28cm
Width 12"/30cm
Length 36"/91cm

Model HD (two-color)

Maximum plate size 5x6.5"/13x17cm
Maximum sheet size 9x10"/23x25cm
Blanket size 7x11x.065"/18x27.9x1.72cm
Physical characteristics:
Height 11"/28cm
Width 12"/30cm
Length 54"/140cm

RECOMMENDED LITTLE JOE ACCESSORIES




Volumeter

We recommend the use of a Little Joe volumeter to obtain even coverage of your drawdown sample. To obtain the proper film thickness of ink for a sheet carrying 40% coverage, we use .6cc of ink (3 notches on an IPI volumeter) to roll up an inking area of 108 sq.in./697 sq.cm.

Hand Brayer


The Little Joe hand brayer also aids in obtaining the proper ink film thickness on the sample drawdown. We offer a 6"/15cm hand brayer (with a diameter of 2.5"/6.35cm) to help obtain perfect inking.

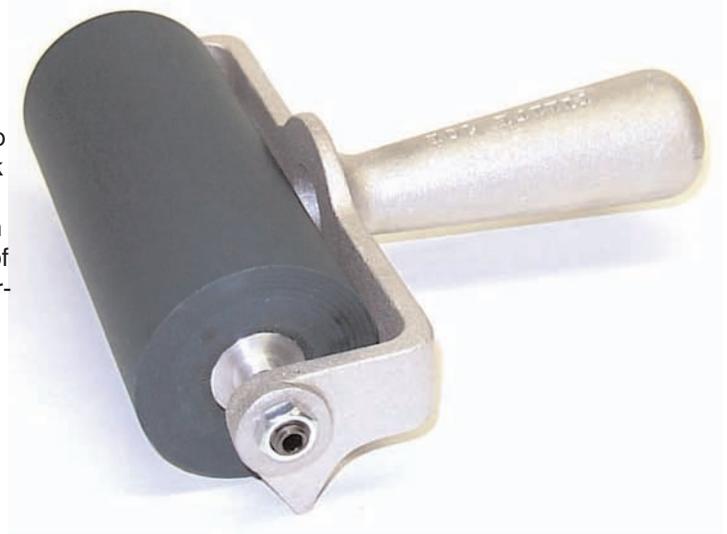

Blanket

We recommend the purchase of a number of replacement blankets when ordering a Little Joe Offset Proofing Press. H3000 and HD3000 are standard compressible blankets, while H8100 and HD8100 are for use with UV inks.

When determining the number of replacement blankets required, please consider that, with 20-50 wash-ups a day, each blanket lasts approximately one month.

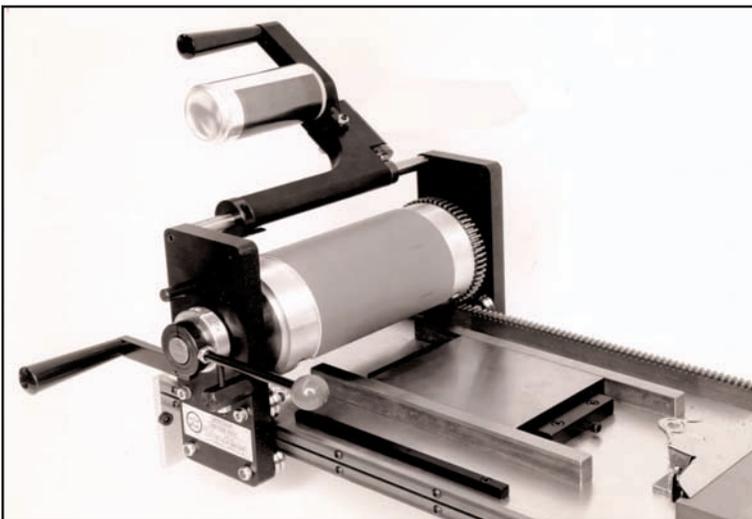

Can Coating Attachment

We offer an accessory attachment for use with cans or tubes. A standard aluminum can coating attachment is available, as well as others that will work with a variety of other cans and cylindrical items.

In order to provide you with the correct holder, please supply a sample of the can or tube which is going to be used with the attachment.

Brand and product names are trademarks of their respective holders. All trademarks may be registered in the U.S.A. and/or other countries. Product design and specifications subject to change without prior notice.

Los productos están protegidos por patentes y patentes pendientes en los EE.UU. y el extranjero, y son marcas registradas y propiedad de sus fabricantes. Las especificaciones y el diseño están sujetos a cambio sin previo aviso.

Grafitec International Inc. Tel: 305/718-9941 Fax: 305/718-9362
E-mail: grafitec@grafitec.com Internet: www.grafitec.com