



Moisture Encounter PLUS

**NON-DESTRUCTIVE MOISTURE
DETECTOR FOR WOOD,
FELT-ROOFING,
DRYWALL,
PLASTER,
BRICK,
TILE ETC.**

- No probes or pins to cause surface damage.
- External Rubber Electrodes in direct contact with test area for best sensitivity and depth of signal.
- Uses low-frequency signals.
- Detects moisture through paint, wall coatings, drywall, ceramic tiles, floor coverings, wood, roof coverings and ceiling tiles.




Non - Destructive Moisture Meter for Building Inspection.

The Moisture Encounter PLUS is an upgraded version of the world's most popular and successful non-destructive moisture meter, the Moisture Encounter.



HOW IT WORKS

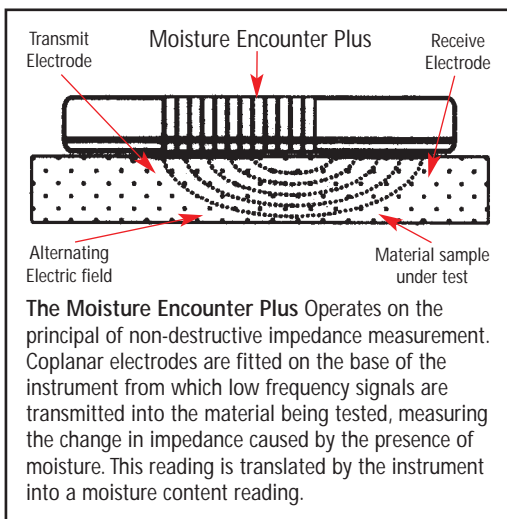

The **Moisture Encounter PLUS** incorporates all the features and benefits found in the original Moisture Encounter such as:

- Non-destructive moisture measurement of wood, plaster, drywall block, brick, roofing and most materials found in the building envelope.
- Three measurement ranges optimized for testing different materials.
- Deep signal penetration up to 1.25" (30mm) to detect elevated moisture through most covering materials without having to damage or puncture the materials being tested.
- Suitable for use on covering materials such as: Porcelain or Ceramic tile, Drywall, Carpet, Vinyl Flooring, VCT tile, Floor Laminates, Wall Coverings, Roofing Membranes.
- External Rubber electrodes make direct contact with the material being tested for best sensitivity, repeatability and greater depth of signal penetration.

In addition to these features the **Moisture Encounter PLUS** offers the following:

- **Wide** range of readings for wood of 5% to 30% on wood scale and 0 to 100 on comparative scale for other materials.
- **Large** clear easy to read display giving meaningful readings.
- **Hold** Function which enables the user to "freeze" the reading, useful when taking readings where the meter face may not be visible.
- **High Moisture** Audio Warning Tone which can be switched on or off.
- **Automatic Power Cutoff** switches "Off" when not in use.

The new Moisture Encounter PLUS incorporates the latest digital technology with analog read out.

